


YX-21DH/YX-31DH/YX-41DH/YX-51DH/YX-61DH

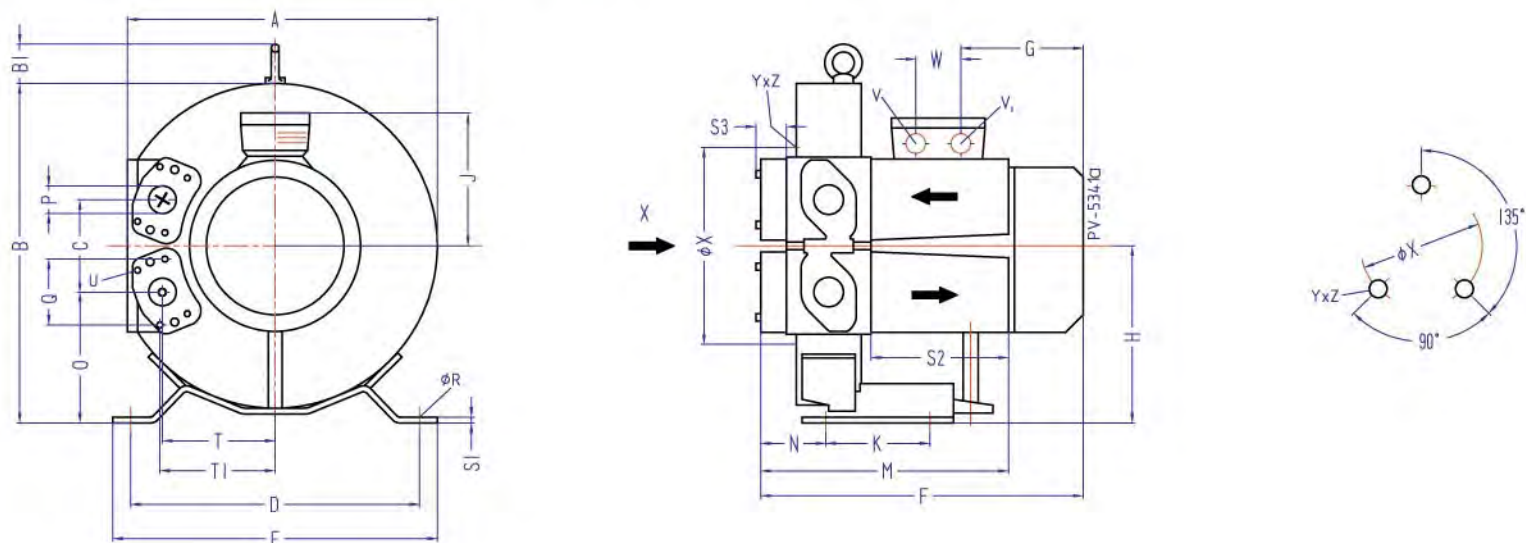

Type	Phases	A	B	B <sub>1</sub>	C	D	E	F	G	H	J	K	M	N	O	P	Q	∅R	S <sub>1</sub>	S <sub>2</sub>	S <sub>3</sub>	T	T <sub>1</sub>	U	V	V <sub>1</sub>	W	∅X	YxZ
型号	相位															G1 <sub>1/4</sub> (18 deep)	64	14	4	140	31	105	107	M6x17	M25x1.5	M16x1.5	32	153	M6x15
YX-21DH-1	3~	294	319	39	87	260	298	293	129	167	111	105	252	65	124														
YX-21DH-A	1~																												
YX-31DH-1	3~	313	339		94	290	325	295	153	177	120		256	67	130							114	116						
YX-31DH-2	3~										120																		
YX-31DH-A1	1~																												
YX-31DH-A2	1~																												
YX-41DH-1	3~	346	375	38	103	315	350	321		195		130	260	66	143							125	127				167		
YX-41DH-A1	1~																												
YX-41DH-A2	1~																												
YX-51DH-1	3~	368	395	39	114	328	363	361	185	205	128	152	265	68	148				5			137	138				192	M8x15	
YX-51DH-2	3~																												
YX-61DH-1	3~	418	455		127	371	406	364		235			271	72	172							153	155				228		
YX-61DH-2	3~								390	211																			